


ADAPTADORES GAS - NPT


Los adaptadores son accesorios prácticos, que permiten utilizar racores con rosca NPT con componentes para el vacío, como soportes para ventosas, válvulas y electroválvulas, filtros, etc., con roscas gas.

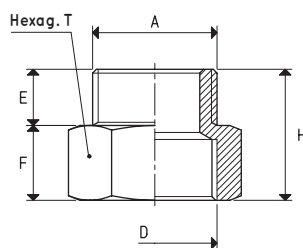

ADAPTADOR HEMBRA GAS - MACHO NPT

Art.	A Ø	D Ø	E	F	H	T
00 08 259	1/8" NPT	G1/8"	10	12	22	14
00 08 260	1/4" NPT	G1/4"	12	17	29	19
00 08 261	3/8" NPT	G3/8"	16	18	34	22
00 08 262	1/2" NPT	G1/2"	17	19	36	27
00 08 263	3/4" NPT	G3/4"	19	20	39	32
00 08 264	1" NPT	G1"	22	20	42	41
00 08 265	1" 1/4 NPT	G1" 1/4	23	23	46	50
00 08 266	1" 1/2 NPT	G1" 1/2	23	23	46	60
00 08 267	2" NPT	G2"	25	24	49	70

Nota: Todos los adaptadores se realizan por lote mínimo de suministro y están sujetos a un balance final.

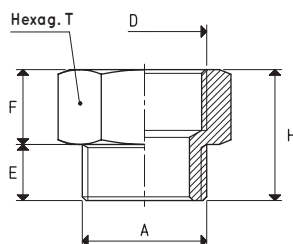

ADAPTADOR MACHO GAS - HEMBRA NPT

Art.	A Ø	D Ø	E	F	H	T
00 08 268	G1/8"	1/8" NPT	10	15	25	14
00 08 269	G1/4"	1/4" NPT	11	17	28	19
00 08 270	G3/8"	3/8" NPT	12	22	34	22
00 08 271	G1/2"	1/2" NPT	14	23	37	27
00 08 272	G3/4"	3/4" NPT	14	24	38	32
00 08 273	G1"	1" NPT	17	28	45	41
00 08 274	G1" 1/4	1" 1/4 NPT	18	28	46	50
00 08 275	G1" 1/2	1" 1/2 NPT	19	29	48	60
00 08 276	G2"	2" NPT	20	31	51	70

Nota: Todos los adaptadores se realizan por lote mínimo de suministro y están sujetos a un balance final.